

Part Number: PT944-89260-C0

Kit Contents

Item #	Quantity Req'd.	Description
1	1	Cargo Lamp Garnish, LH
2	1	Cargo Lamp Garnish, RH
3		

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1		
2		
3		

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
Blanket	Vehicle Protection
Special Tools	Notes
Installation Tools	Notes
Socket	10mm
Trim Removal Tool	
Extension	
Torque Wrench	5.4 N-m (48 in-lb)
Special Chemicals	Notes

General Applicability

USA & 2-row only

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Req'd.	Description
1	5	90467-09245 (Clip)
2		
3		

Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.
	REGULATORY MARK: This mark indicates the component is related to regulatory compliance



Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. Prepare for Installation

- Confirm Kit Contents.
- Open rear hatch door.
- Remove any items from rear cargo area (if applicable).

2. Disconnect Battery

- Remove the 12V battery negative terminal
 - For HV: battery located in rear cargo area on driver's side. (Figure 1)
 - For Gas: battery located in engine bay.



Figure 1

3. Disassemble RH-side

- Remove upper cargo net hook and fastener on RH Deck Side Trim and set aside. (Figure 2)



Figure 2

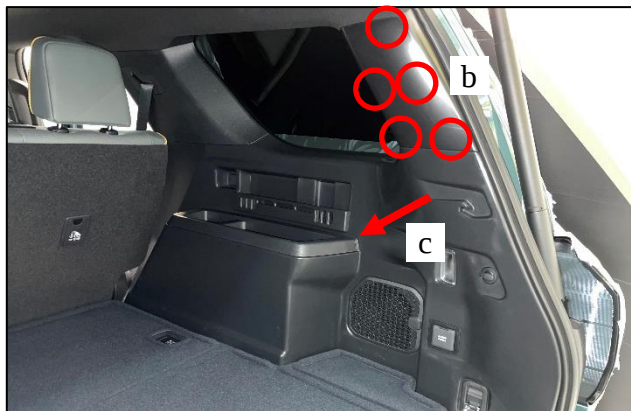


Figure 3



Figure 4

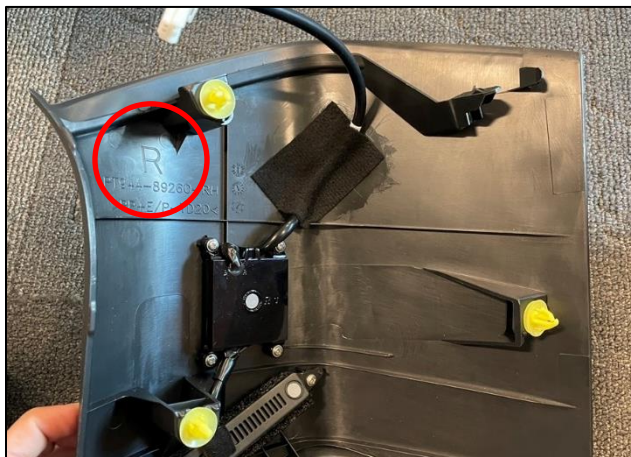


Figure 5

(b) Gently remove the D-Pillar Garnish by disengaging five clips.
(Figure 3)

(c) Gently pull back on the RH Deck Side Trim to disengage the clips from the D-Pillar Garnish.
(Figure 3 & Figure 4)

(d) Discard the D-Pillar Garnish.

⚠ NOTE: Remove any clips that may have disengaged from D-Pillar Garnish and remained on vehicle.

4. Install RH-side Accessory

(a) Place the lower part of the RH accessory part behind the RH Deck Side Trim and connect the wire harness.
(Figure 5)

Procedure



Figure 6

- (b) Engage the RH accessory part clips to the RH Deck Side Trim.
(Figure 6)
- (c) Install RH Deck Side Trim and RH accessory part to vehicle ensuring all clips are engaged.
- (d) Install upper cargo net hood and fastener using 10mm.

⚠ NOTE: Ensure weatherstrip is properly seated.

5. Disassemble LH-side

- (a) Remove the service panel to the bottle jack and set aside.
(Figure 7)



Figure 7



Figure 8

- (b) Remove upper cargo net hook and fastener on LH Deck Side Trim and set aside using 10mm socket.
(Figure 8)

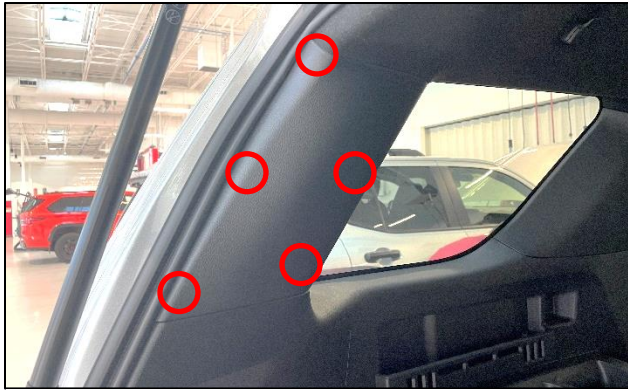


Figure 9

- (c) Gently remove the D-Pillar Garnish by disengaging five clips.
(Figure 9)
- (d) Gently pull back on the LH Deck Side Trim to disengage the clips from the D-Pillar Garnish.
- (e) Discard the D-Pillar Garnish.

6. Install LH-side Accessory



Figure 10

- (a) Place the lower part of the LH accessory part behind the LH Deck Side Trim and feed the wire harness near the bottle jack bracket.
(Figure 10)
- (b) Engage the LH accessory part clips to the LH Deck Side Trim.
- (c) Install LH Deck Side Trim and LH accessory part to vehicle ensuring all clips are engaged.
- (d) Connect wire harness and tuck accessory harness behind vehicle wire harness.
(Figure 11)
- (e) Install service panel.
- (f) Install upper cargo net hood and fastener using 10mm.



Figure 11

⚠ NOTE: Ensure weatherstrip is properly seated.

7. Connect Battery

- (a) Connect the negative terminal cable.
(Figure 12)

||  Torque: 5.4 N-m (48 in-lb)

 **NOTE: DO NOT TOUCH THE POSITIVE
TERMINAL WITH ANY TOOL.**



Figure 12

TOYOTA

4RUNNER/HV

2025 -

INTERIOR LIGHT KIT

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
<u>Accessory Function Checks</u> ☐ Interior Light Kit function	If back door is open, Interior Light Kit lamps are ON/illuminated If back door is closed, Interior Light lamps are OFF/non-illuminated
<u>Vehicle Function Checks</u> ☐ OE cargo lights function	If back door is open, Interior Light Kit lamps are ON/illuminated If back door is closed, Interior Light lamps are OFF/non-illuminated
<u>Vehicle Appearance Check</u> ☐ After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMNA Accessory Quality Shipping Standard)